



« 1996 Town Car/Crown Victoria/Grand Marquis Table of Contents»  
«Group 15: AUDIO SYSTEMS»  
«Section 15-04: Phone, Mobile»  
«DESCRIPTION AND OPERATION»

---

## Phone, Mobile

The mobile phone system consists of these major components:

- headliner mounted mobile telephone microphone (19A391) with remote multi-function button
- glass mounted mobile telephone antenna (19A390) with multi-function control antenna cable (19A397)
- mobile telephone transceiver (19A387)
- mobile telephone handset (19A383)


Some features of the mobile phone system include:

- voice activation
- hands-free operation
- speed dialing of up to 30 numbers
- audio system muting during mobile phone operation

## Controls

Note:

See mobile phone User's Manual for complete operating instructions.

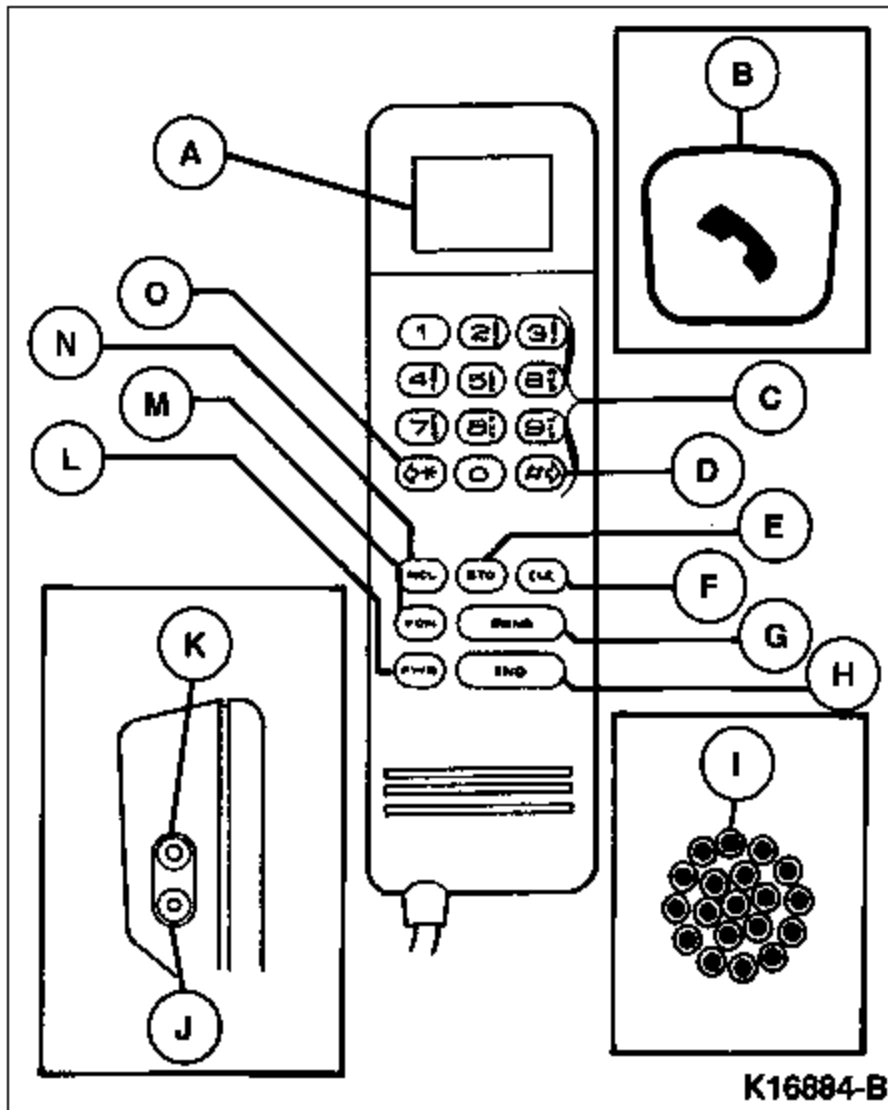

**K16884-B**

Item	Button	Description
A	DISPLAY	Provides a visual indication of dialed numbers and messages including: <ul style="list-style-type: none"> <li>• In Use Indicator—Turns on when a call is placed or answered. Turns off when a call is ended.</li> <li>• No Service Indicator—Turns on when unit is out of the range of a cellular service area.</li> <li>• Roam Indicator—Turns on when the unit is within range of a cellular system other than its home system.               <ul style="list-style-type: none"> <li>- Home type system: steady</li> <li>- Non-Home type system: blinking</li> </ul> </li> </ul>
B	REMOTE MULTI-FUNCTION BUTTON	Located at the microphone. Press to answer incoming calls, end calls in progress, or initiate voice memory calling.
C	NUMERIC KEYPAD	Used to enter phone numbers prior to initiating a call.

D	POUND KEY /#>	Used in conjunction with other keys.
E	STORE	Used to store phone numbers into the memory.
F	CLEAR	Press and release to clear last digit entered. Press and hold to clear display in the event of misdial (does not affect numbers stored in memory).
G	SEND	Press to initiate a call after entering the phone number on the keypad or to answer a call. Press for switchhook flash when a call is in progress.
H	END	Press to end a call.
I	MICRO-PHONE	Direct hands-free conversation and all voice commands toward the microphone.
J	VOLUME -	Press to decrease handset volume.
K	VOLUME +	Press to increase handset volume.
L	POWER	Press to turn on. Press again to turn off.
M	FUNCTION	Used in combination with other keys for specific user-programmed operations.
N	RECALL	Press to recall and display numbers stored in memory.
O	STAR KEY/<*	Used in combination with other keys.

## Programming


### CAUTION:

To prevent damage to factory settings of transceiver, do not press any buttons other than the ones involved in the programming of the electronic serial number. If an incorrect button is accidentally pressed, press the PWR button to turn off the phone.


To program the telephone numbers into the mobile telephone transceiver using the mobile telephone handset:

1. Obtain the electronic serial number:
  - Press PWR button to turn on the phone.
  - Press FCN + 00 + <\*<\*.
  - Enter 83786633 + STO + #>.
  - Press 38 + #> to display location number 00 and first two electronic serial number digits.
  - Press <\* to scroll through the electronic serial number, two-digits at a time, preceded by the two-digit location number.

The electronic serial number consists of eight digits and are numeric (0-9) and alpha (A-F).

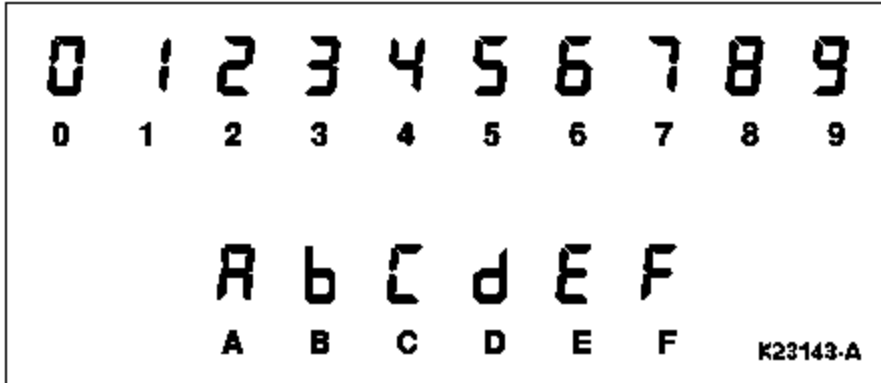

The electronic serial number digits are preceded by a location number. For example, an electronic serial number of 826ACFE3 is displayed.

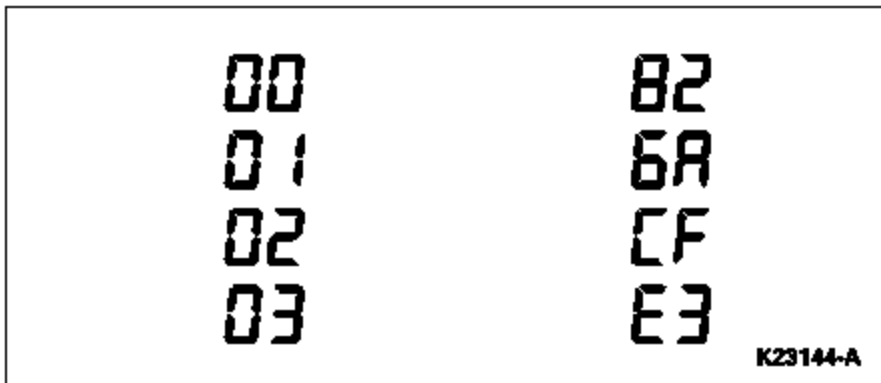

-- After the eight-character electronic serial number has been retrieved, press the PWR button to turn the cellular phone off.

Enter the security code and the lock code as follows:

2. Turn the phone on by pressing the PWR button.
3. Note: Once the customer enters a user security code, you will need to change this number to 0+security code+security code to re-enter the programming mode. Example: if security code is 123456, enter: FCN + 0123456123456 + RCL.

Get into programming mode by pressing FCN + 0 000 000 000 000 + RCL.

4. The mobile telephone handset will display 01. This indicates Step 1.
5. Press < \* so that mobile telephone handset displays the contents of Step 1. The display should show the system I.D. number (five digits). Enter the system I.D.
6. Press < \* to advance to the second programming step. The display should show 02.
7. Press < \* again to show the contents of the second step, which is the area code. Enter the area code.
8. Press < \* to advance to the next programming step and so on. Enter the information in all the programming steps. Edit the information as follows:
  - Pressing CLR while the contents of a programming step are displayed will change the contents



11	OPTION PROGRAMMING For FORD telephones set to 1100	0 XXXX	0 XXXX
----	--	-----------	-----------

9. Note: The three-digit unlock code is used to lock your mobile telephone to prevent unauthorized usage. With many models, this number can be programmed as often as desired. Consult your User's Manual, under the topic "Changing Your Unlock Code".

After all information has been entered, press < \* to go through all the entries to verify that the information entered is correct. To store the information, press < \* so that the display shows any entry number (i.e. 01, 02, etc.), then press SEND. The mobile telephone transceiver should power down and power-up to indicate that the programming is done.

10. Verify that the information was stored by pressing RCL + #>. The phone number just programmed should be displayed.
- Any subsequent programming attempts will require that you enter FCN + 0 + security code + security code + RCL in order to enter the programming mode.
  - The phone number can be programmed up to 15 times. After that, the phone number cannot be revised. Other programmed data can be revised indefinitely.
11. If the telephone cannot make calls within a few hours, verify that the local service provider/carrier has the correct electronic serial number for the user's telephone.

## Dual Phone Numbers

The mobile telephone is equipped with a feature that allows the customer to maintain two different telephone numbers.

- Both numbers can be from separate carriers and are accessed separately in the telephone.
- The phone must be programmed by the dealer with both phone numbers.
- To arrange for dual phone numbers, contact the dealer or call the Ford Cellular System at 1-800-367-3013.

The phone can only be active in one phone number at a time.

- Calls will be placed and received on the active phone number only.
- To determine which phone number is active press RCL + #> to display the number.

To operate with the phone number in the display press END.

- To switch the telephone to the other phone number press RCL + #> + RCL.
  - The original telephone number will disappear from the display and the new number will appear.
-