




Torsion Bar Loading

1. **WARNING: SAFETY GLASSES MUST BE WORN WHEN PERFORMING THIS OPERATION.**

WARNING: USE CARE WHEN ADJUSTING THE TORSION BAR AS IT IS UNDER TENSION AND COULD SPRING OUT OF CONTROL IF NOT HANDLED PROPERLY.

Locally obtain the following materials:

- a. Round flexible cable, 6 mm (1/4 inch) diameter by 1.2 m (4 feet) long.
 - b. One 6 mm (1/4 inch) cable clamp.
 - c. Water pipe, 13 mm (1/2 inch) diameter by 50 mm (2 inches) long
 - d. Rubber heater hose, 16 mm (5/8 inch) diameter by 152 mm (6 inches) long.
2. Assemble these materials as shown.

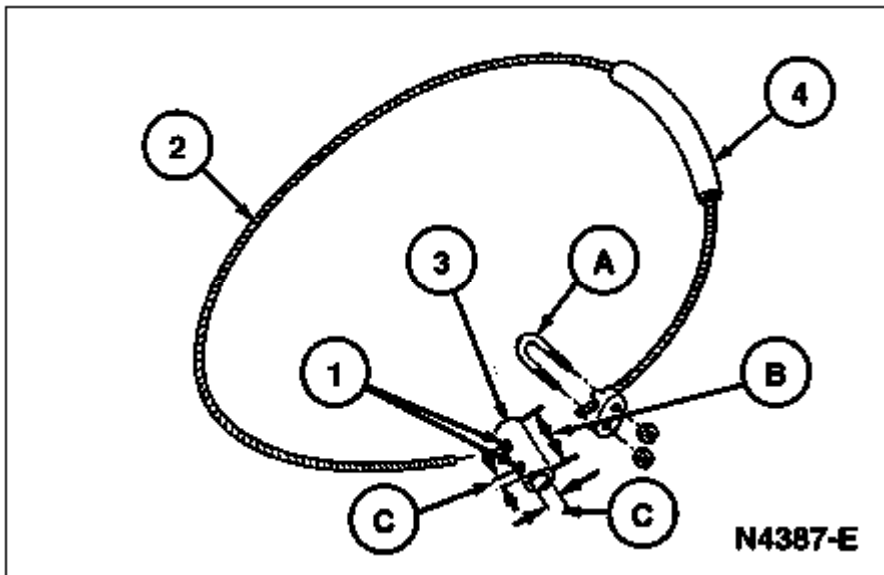


Item	Part Number	Description
1	--	9.4 mm (3/8 inch) Diameter Holes (2) Drilled in Water Pipe
2	--	6 mm (1/4 Inch) Diameter Round Flexible Cable (4 Ft. Req'd)
3	--	Water Pipe
4	--	Runner Heater Hose 16 mm (5/8 Inch) in Diameter, 152 mm (6 inches) in Length

A	--	6 mm (1/4 inch)
B	--	50 mm (2 inches)
C	--	13 mm (1/2 Inch)

3. Install luggage compartment door/tailgate hinge torsion bar by inserting one end into hole provided in luggage compartment door hinge and nest other end into upper groove of opposite hinge support.
4. Position the handmade tool on the end of luggage compartment door/tailgate hinge torsion bar to be loaded.
5. With an assistant, place a long flat-blade screwdriver over the top of luggage compartment door/tailgate hinge torsion bar to be loaded.

Luggage Compartment Door Torsion Bar

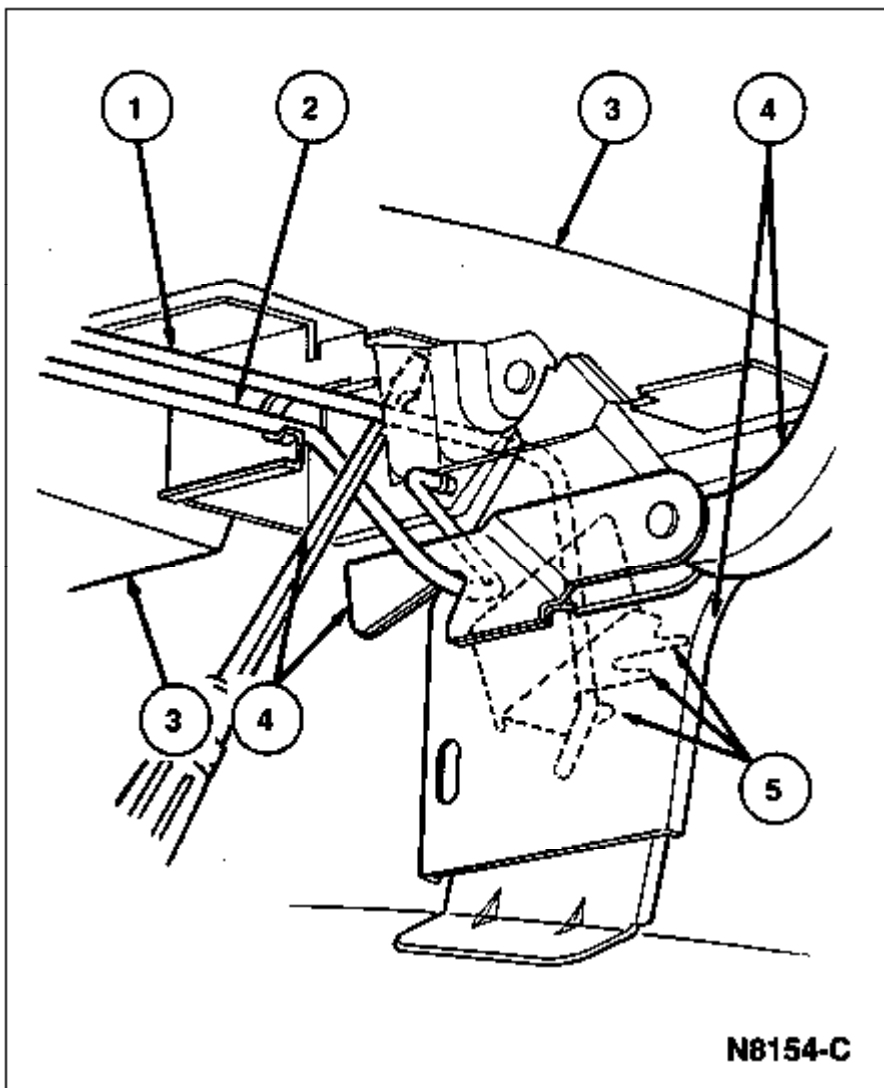

Item	Part Number	Description
1	44891	Luggage Compartment Door/Tailgate Hinge Torsion Bar, LH

2	44890	Luggage Compartment Door/Tailgate Hinge Torsion Bar, RH
3	46506	Package Tray Panel
4	42700	Luggage Compartment Door Hinge
5	--	Adjustment Notches

6. While pulling on the luggage compartment door/tailgate hinge torsion bar, with the assistant holding the screwdriver, guide luggage compartment door/tailgate hinge torsion bar down along the rear edge of the support into the lower groove of the hinge support so luggage compartment door/tailgate hinge torsion bar can be locked in the lowest outboard adjustment notch.
 7. Install the handmade tool on the end of luggage compartment door/tailgate hinge torsion bar (if not already installed) and unlock the luggage compartment door/tailgate hinge torsion bar by pulling the tool. Work luggage compartment door/tailgate hinge torsion bar up the hinge support to the second notch and release. If additional adjustment is required, go to Step 8.
 8. Using a 3/8 inch drive, 1/2 inch deep well socket and 6 inch extension, position the socket over the end of luggage compartment door/tailgate hinge torsion bar and lift to unlock luggage compartment door/tailgate hinge torsion bar. Reposition luggage compartment door/tailgate hinge torsion bar up the hinge support to the top notch and release.
-